



# RGB-CT600 Multi-function RGB+W DMX Controller

## INSTALLATION INSTRUCTIONS


JOB NAME: \_\_\_\_\_  
 LOCATION: \_\_\_\_\_  
 QUOTE/REF#: \_\_\_\_\_

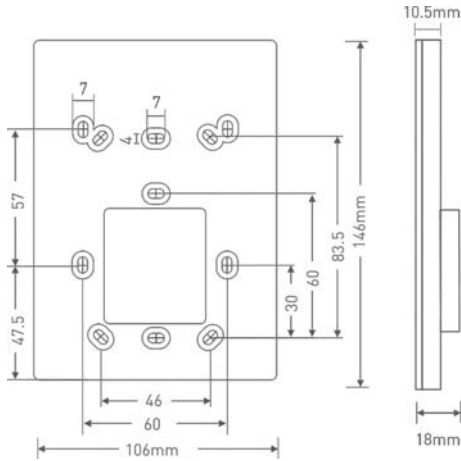




Touch Panel

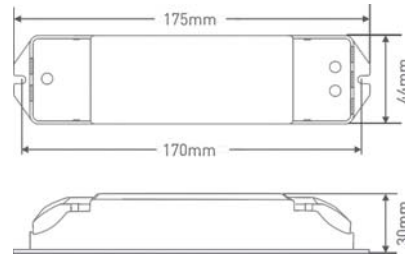

Receiver

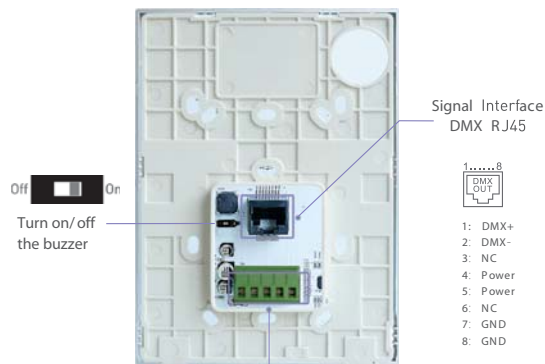


- 1: DMX+  
 2: DMX-  
 3: NC  
 4: Power  
 5: Power  
 6: NC  
 7: GND  
 8: GND

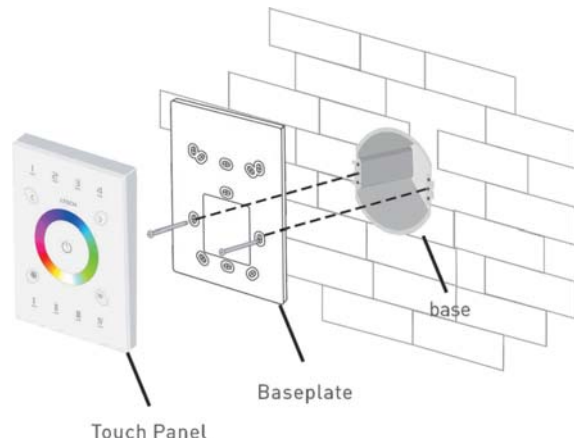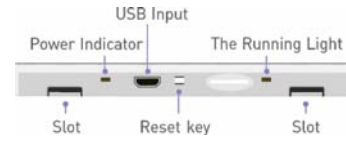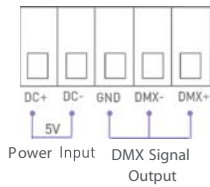


# RGB-CT600 Multi-function RGB+W DMX Controller


1. Install the back box into the wall. Typical boxes as below:

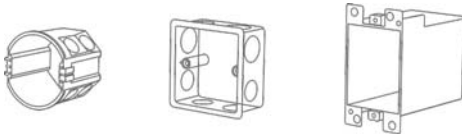


2 Use a straight screwdriver to pry the position shown:

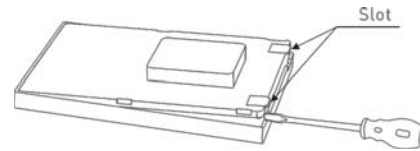

3. screw the baseplate and the back box in the wall firmly.

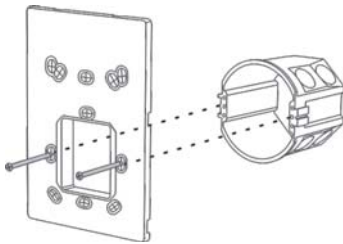


4 Connect in a right way and put the power adapter into the back box.

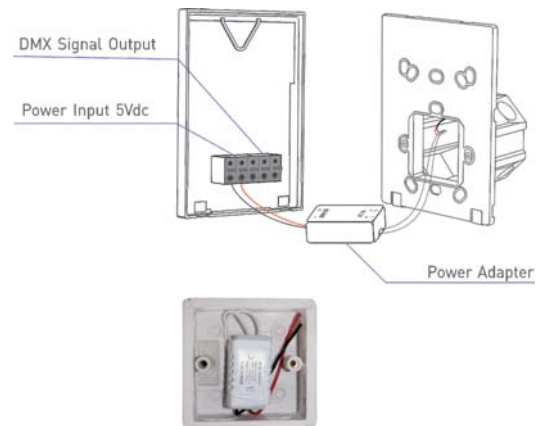


# RGB-CT600 Multi-function RGB+W DMX Controller


3. screw the baseplate and the back box in the wall firmly.

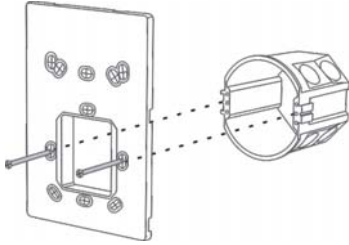


4. Connect in a right way and put the power adapter into the back box.

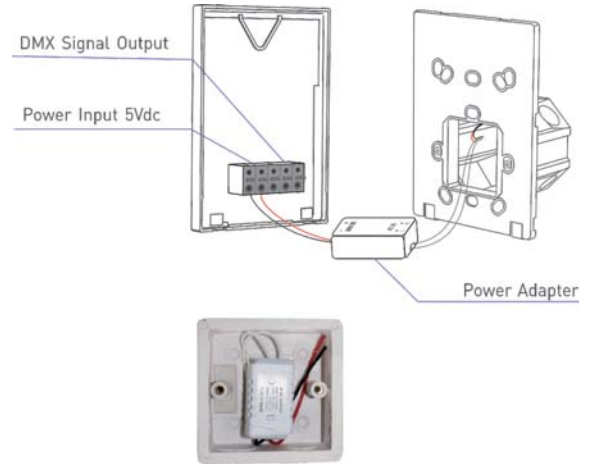

5. Embed the upper touch panel into the baseplate and then tap the bottom to press into the slots.

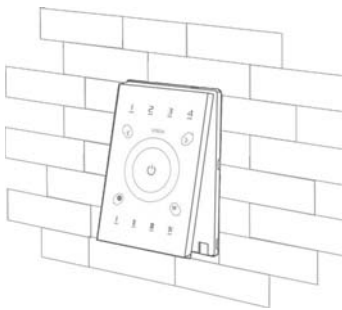

## KEY FUNCTIONS

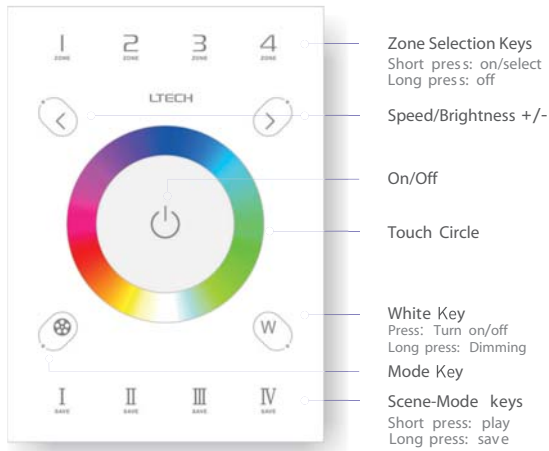

The Changing Mode (Press to Select):

1. Static Red
2. Static Green
3. Static Blue
4. Static Yellow
5. Static Purple
6. Static Cyan
7. Static White
8. RGB Jumping
9. 7 Colors Jumping
10. RGB Smooth
11. 7 Colors Smooth
12. Static Black

## DMX OUTPUT WIRING

