

ALP-3500TL TRIMLESS CORNER PROFILE


INSTALLATION GUIDE

PRE-INSTALLATION

Recessed/ Corner Mount

Disconnect power source prior to installation.

DIMENSIONS

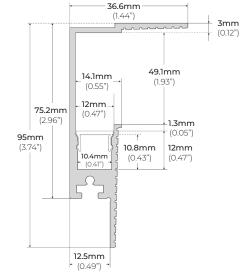

SAFETY

Read all instructions before installation.

These products may represent a possible shock or fire hazard if improperly installed.

Do not look directly into light.

This fixture is only suitable for indoor installation.



Product should be installed by a qualified electrician.



Product should be installed in accordance with these instructions and current electrical codes.

INSTALLATION


 STEP 1
 Measure cutout and mark drywall where channel will be mounted.

 Cut channel to desired length.

STEP 2 Drill a hole in ALP-3500TL profile to accomodate the power feed cable. (*Figure 1*)

Mount/ Install ALP-3500TL profile onto drywall and secure in place with appropriate screws. (*Figure 2*)

* Make sure to use screws desigened for metal.

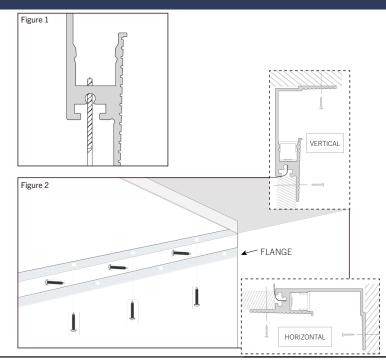



INSTALLATION (CONT.)

STEP 4	Peel the adhesive backing of the LED strip and install onto the channel. Carefully lead the power feed cable out of the previously drilled hole in the profile. (<i>Figure 3</i>)	Figure 3	Figure 4
	*Make sure that the LED strip is laid evenly flat on the channel. This will avoid having any dark spots once lit up.		
STEP 5	Push diffuser cover in place. (<i>Figure 4</i>)		
	Before applying plaster to the edges, use drywall tape along the edges to avoid the plaster from cracking after installation.		
STEP 6	Apply plaster to the flanges and wall to create an even surface. Once dry, finish with sand and paint. (<i>Figure 5</i>)	Figure 5	
	* Make sure that the drywall tapes do not overlap.		PLASTER LAYER
STEP 7	Using a sharp-edge tool, gently remove excess material (plaster and paint) in between the profile and the lens.		

